



American Party Place
4522 S Tacoma Way, Tacoma, WA 98409
253-473-3300
www.americanpartyplace.com

Sno-Kone Machine

ELECTRICAL REQUIREMENTS

WARNING! Connect the AC cord to a suitable 120 volt outlet and make sure no other equipment is operating from the same outlet! Failure to do so can reduce this unit's output and performance!

ICE REQUIREMENTS

The Sno-Konette can take ice cubes or small blocks of ice pieces approximately 3 to 4 inches in size.

NOTE: The ice will not fit through the shaving chute if the pieces are too large!

TO OPERATE THE SNO-KONETTE

- 1) Fill the hopper to within an inch of the top with ice cubes or block ice (no larger than 3" to 4"). The larger the pieces, the better the snow.
- 2) Switch the motor on. Wait for the motor to come to full speed!
- 3) Push the pusher handle down against the ice in the hopper. Apply firm and even pressure to make the best snow.

Tip: Practice will allow you to gauge when to stop pressing. This allows the ice to resettle against the shaver head. You may find that you need to relieve the pressure two or three times in a cycle. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy.

NOTE: NEVER PUT YOUR HAND OR FINGERS IN THE ICE HOPPER WHILE THE MOTOR IS RUNNING! IT CAN CAUSE SEVERE INJURY!!

Never allow any foreign or metallic objects around the shaver area of the Sno-Konette. Ice picks, scoops, and debris that may be in the ice often damage blades.

Cleaning Instructions

Take a damp clean towel to the inside of the machine and wipe it down thoroughly. Never submerge under water.